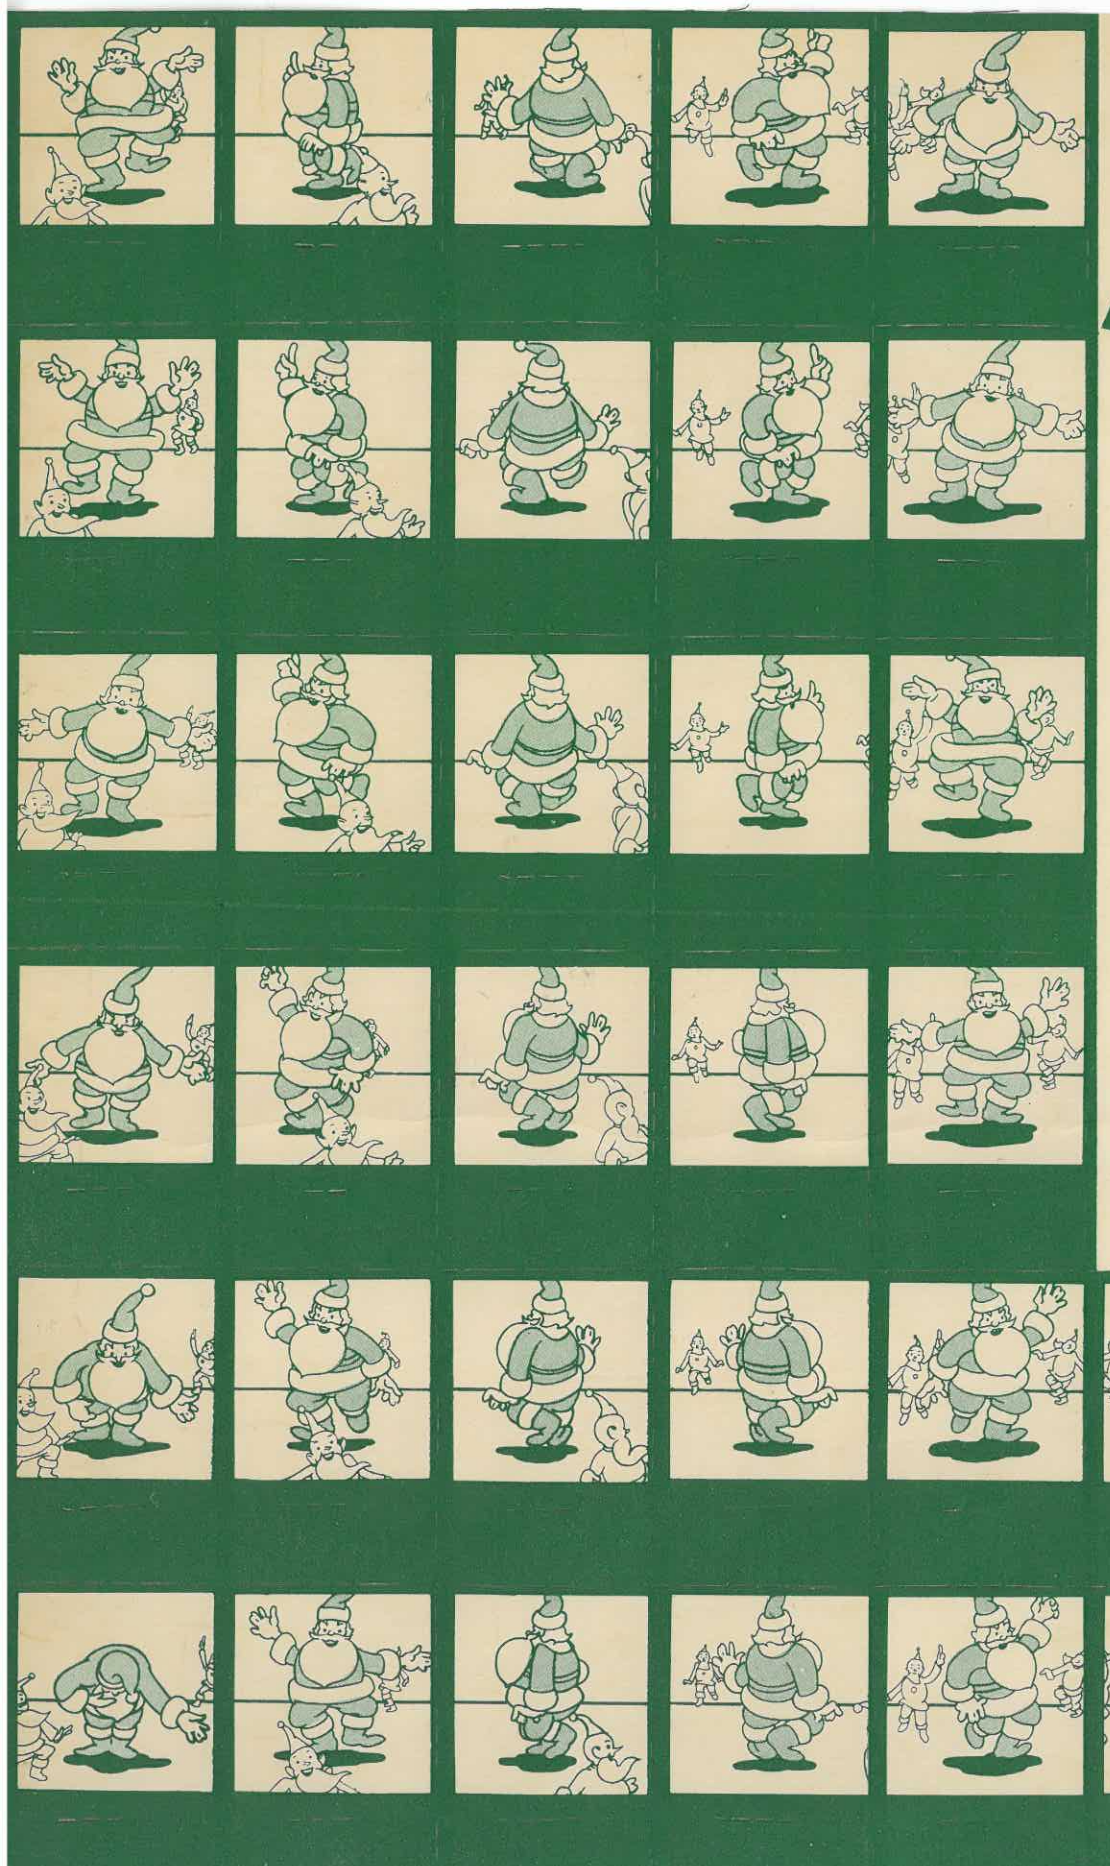

SET FOUR "SANTA'S DANCE"

HOW TO INSERT COMPLETED PICTURE REEL INTO THE MACHINE

Insert one end of shaft through circular hole in one side of machine. Other end of shaft goes through hole in opposite side.

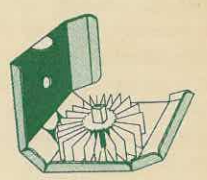

Close machine, allowing some of the pictures to project through eye piece opening.

LITHO IN U.S.A.

SET TWO "JACK & JILL"

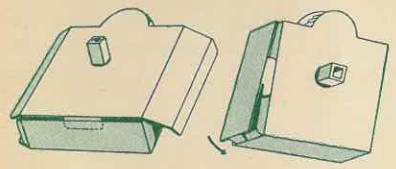

Insert the tabs into the slots on bottom of machine. Then close ends.

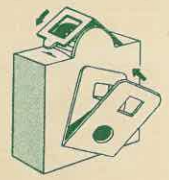

Next attach the crank and the eye piece, as indicated in above sketch.
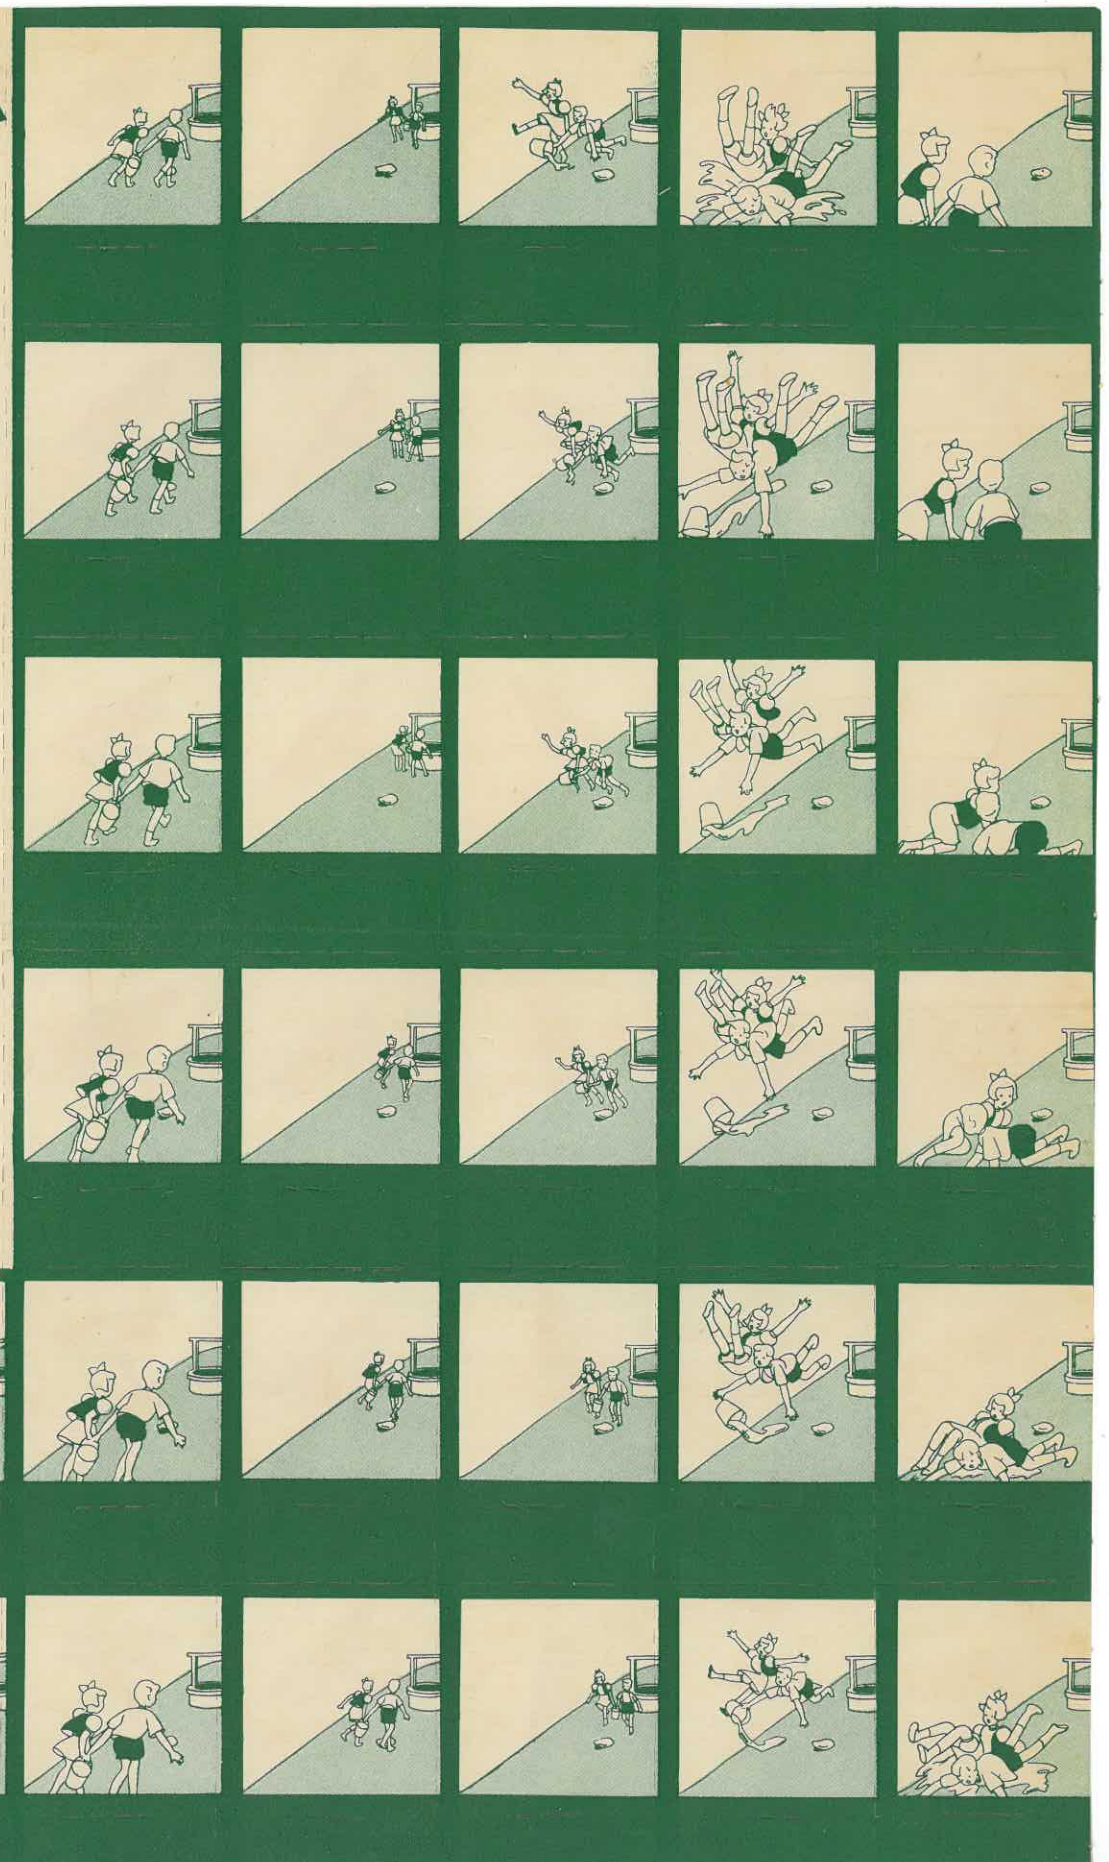
Insert finger-tip in circular opening in crank and turn.